


How to configure Exaquantum/AMD

AMD can be installed at a site that has no Process Control System (PCS) or CAMS and used to create the initial Tag and Alarm configuration. This will be typically during the initial AOA process. At the point when the PCS and CAMS systems are installed and configured the Alarm master set points can be downloaded to the PCS and the Alarm attributes downloaded to CAMS. Below are the basic steps to configure Exaquantum/AMD.

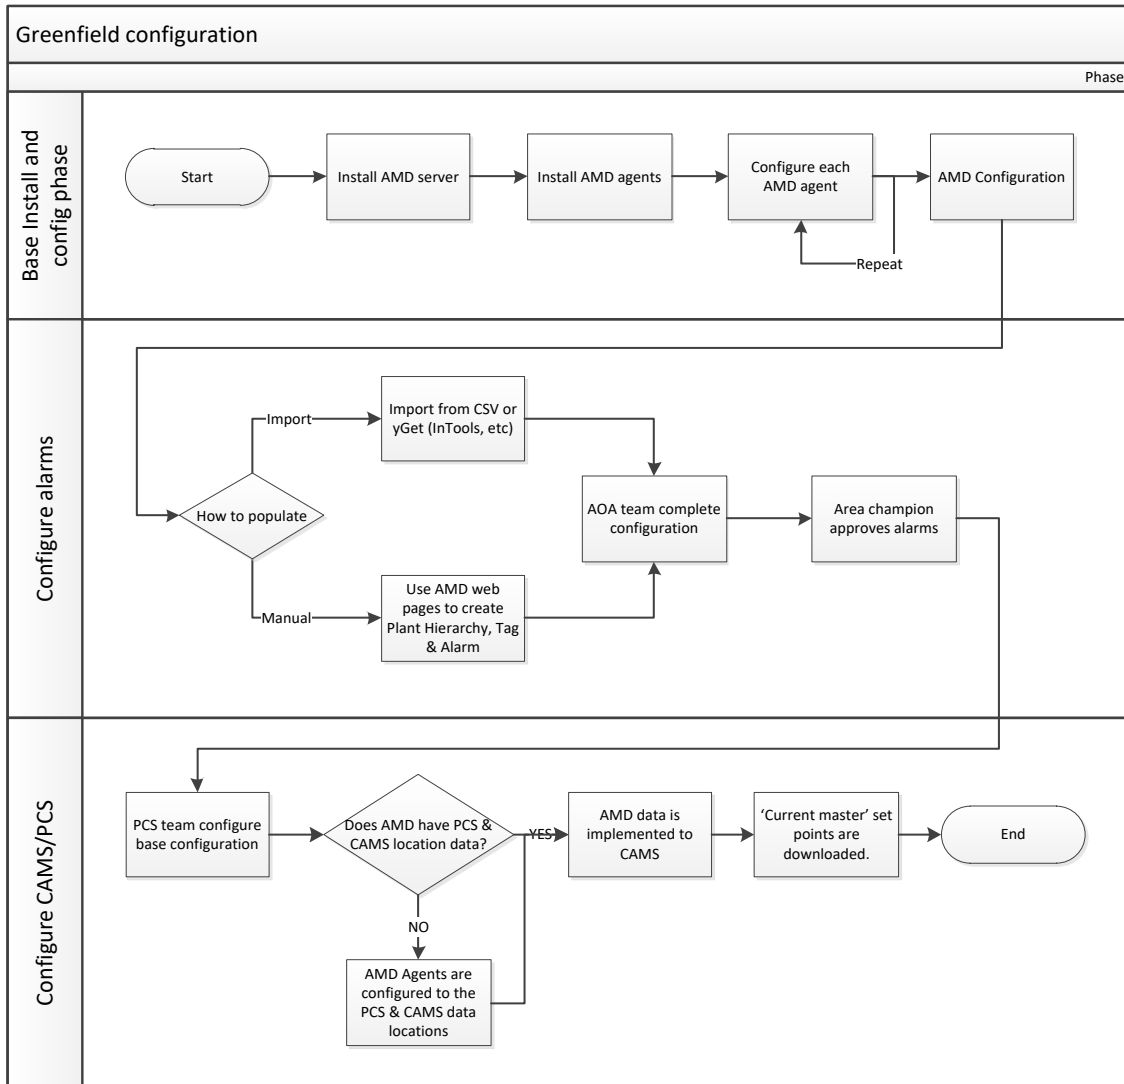

Exaquantum /AMD Releases Affected

R3.01, R3.02