





There is no History data when using the Excel Addins

If the DCOM settings are not set up with the correct users with the correct permissions no history will be displayed in the Excel Addins.

1. To set the DCOM settings open the dcomcnfg.exe as administrator.


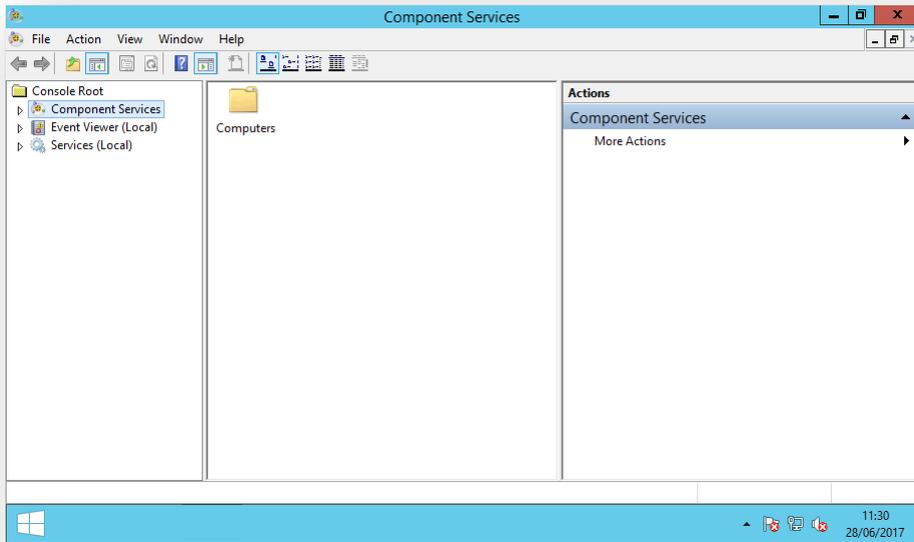


2. Under Component Services – Computers – My Computer – DCOM Config select Microsoft Excel Application and Right Click, select properties.

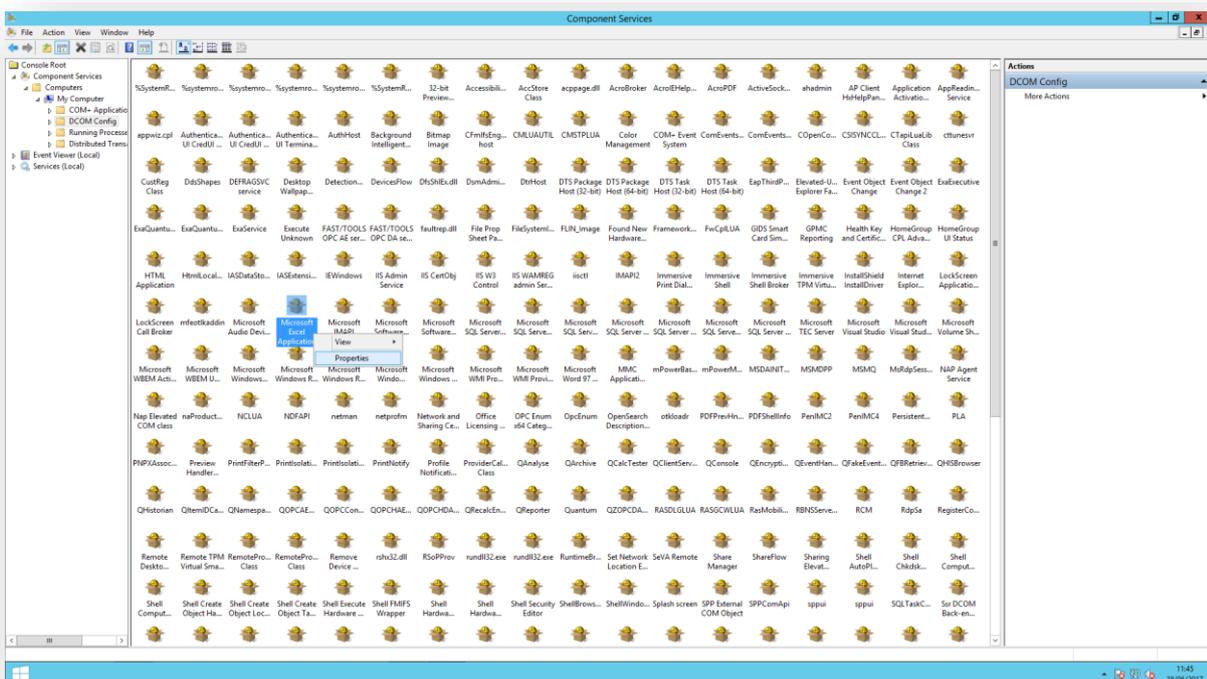




3. Select the Security tab, on Access Permissions select Edit and Add the user 'Everyone' allowing Local and Remote Access.

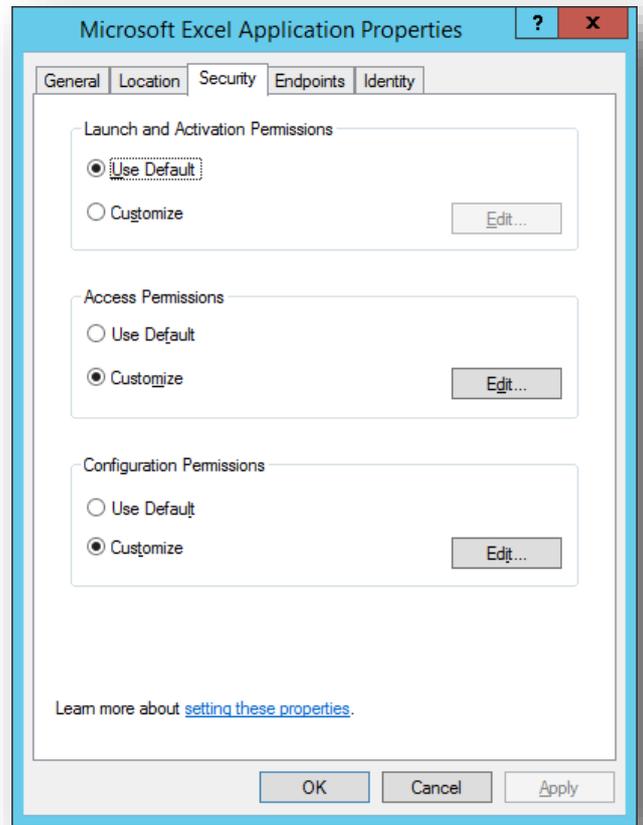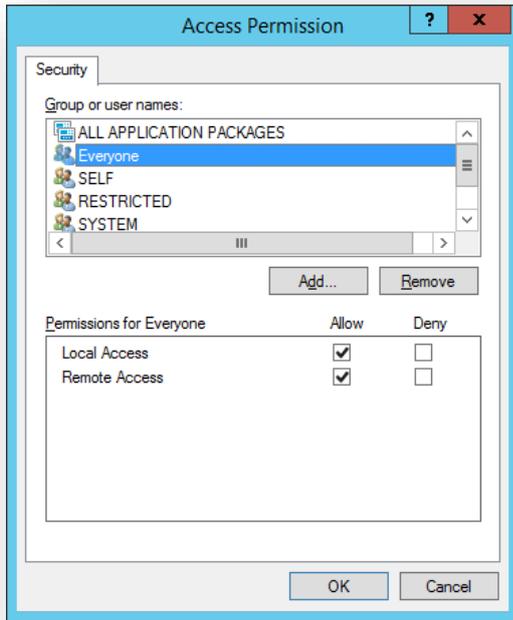

4. On Configuration Permissions select Edit and Add the user 'Everyone' allowing Full Control, Read and Special Permissions (if available).

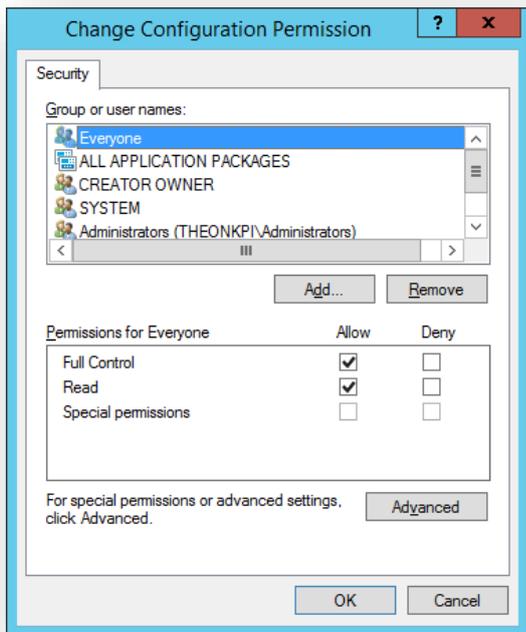

If the user does not want to use Everyone the Service User can be used.



5. Once this has been done select Apply on the Microsoft Excel Application Properties, close down any open versions of Excel, re open Excel the history data should now be available.

Exaquantum Excel Addins Releases Affected

R3.02